



Code 3072-J

100 Test Strips

QAC

Lamotte

Insta-Test[®] ANALYTIC




Immerse pad in solution for 10 seconds.

SHAKE OFF EXCESS WATER.

Compare pad to color chart.

- Sample must be at room temperature (above 75°).
- Keep out of sunlight.
- Keep vial closed when not in use.

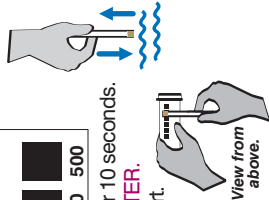

View from above.

Code 3072-J

made in USA

Lamotte Company
Chesterown, MD 21620 USA
www.lamotte.com

